



USB 9531-9532-9533

## Mirror Ball

**Many thanks for purchasing this US Blaster product. Always read the safety instructions below before letting a professional install this equipment.**

### GENERAL SAFETY INSTRUCTIONS

- Always read the user guide before using the equipment.
- Keep the user guide in a place where everyone can read it.
- Use the equipment indoors and not in a humid rooms.
- Never remove or insert a plug from or into a wall socket with wet hands.
- If the plug and/or cable and/or cable input of the equipment is damaged it must be repaired by a professional.
- Always take the plug out of the wall socket in the event of a thunderstorm, and also when the equipment is not being used for a while.
- Never remove the plug from the power socket by pulling on its cable.
- Install the equipment in such a way that sufficient cooling is possible.
- Never use the appliance in the vicinity of heat sources and/or in direct sunlight.
- Make sure that no small objects or liquids can get in to the appliance.
- Only clean the appliance with a slightly moist dust-free cloth. Do not use cleaning products or solutions!
- The appliance contains no components, other than those mentioned in the user guide that can be repaired or replaced by the user.
- If the appliance is defective, it must be repaired by a US Blaster qualified repairs company.
- Keep the equipment out of the reach of children.

*Voer zelf geen reparaties uit aan het apparaat; in élk geval vervalt de totale garantie. Ook mag het apparaat niet eigenmachtig worden gemodificeerd, ook in dit geval vervalt de totale garantie. Tevens vervalt de garantie bij ongevallen en beschadigingen in élke vorm t.g.v. onoordeelkundig gebruik en/of het niet in acht nemen van de waarschuwingen in het algemeen en gestelde in deze gebruiksaanwijzing. US Blaster Europe aanvaardt geen enkele aansprakelijkheid in geval van persoonlijke ongelukken als gevolg van het niet naleven van veiligheidsinstructies en waarschuwingen. Dit geldt ook voor gevolgschade in wélke vorm dan ook.*


**Keep the packaging safe so that, if the equipment is defective, you can send it back in its original packaging and so avoid any damage.**



## Device setup and connection

### Mounting the mirror ball motor

Choose a suitable supporting location for the mirror ball(4). Reliable operation requires the mirror ball motor (2) to be mounted in absolute horizontal position. Ball and motor must be installed outside the reachable area of persons. Now screw the mirror ball motor to the surface using three fitting screws (3). The motor fastening must be made such that it is capable of supporting at least five times the required weight. After having checked the safety for the fastening, hang the supplied chain into the key ring of the mirror ball motor and the mirror ball. Make sure that the rotation of the mirror ball is not slowed down by fixed parts or decorative parts. The mirror ball including motor must be secured using an appropriate safety cable in the chain or via a safety net.

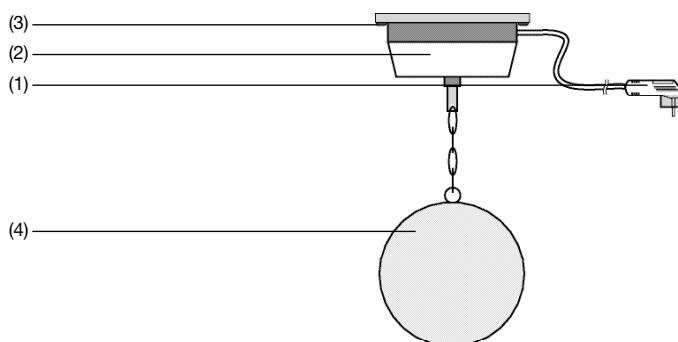

### Taking into service

Connect the earthed plug of the gear motor to a socket outlet and check the correct function of the device. To obtain the best possible light effect you must direct the point projector directly to the mirror ball.

### Installatie en gebruik

Haal de rookmachine uit de verpakking. Sluit de netaansluiting van de afstandsbediening nog niet aan,

### Maintenance and care



**Pull the main cord before cleaning the device. During cleaning, make sure that the area below the device is restricted.**

To clean the device from the outside, use a soft, dry cloth or paint brush. Do not use aggressive cleaning agents which could damage the surface of the device enclosures.

### Proper use

The mirror ball is only approved for connection to 230V/50Hz AC voltage and for indoor use. Protect the device from moisture and excessive dirt. The device is not suitable for industrial use. A use other than described above damages the product and furthermore involves hazards such as short-circuit, fire, electric shock etc. The mirror ball may not be modified or rebuilt and the enclosures are not to be opened! The safety notes must be observed!

### ATTENTION!



**The mirror ball is not suitable for permanent operation!**

### Product description

To obtain best light effects of the mirror ball use a power point projector type Par 36 (not included) to illuminate the mirror ball. The colored punctual light effect of the projector is projected on the mirror ball with 20 cm diameter. The mirrors of the ball then reflect small light points in different directions. Driven by their own gear motors, color screen and mirror ball revolve continuously. This produces an ever changing light effect.



USB 9531-9532-9533  
**Mirror Ball**

**Hartelijk dank voor de aanschaf van dit US Blaster product. Alvorens dit apparaat door een deskundige in gebruik te laten stellen altijd eerst onderstaande veiligheidsvoorschriften lezen.**

## **ALGEMENE VEILIGHEIDSVOORSCHRIFTEN**

- Lees altijd eerst de gebruiksaanwijzing voordat u een apparaat gaat gebruiken.
- Bewaar de handleiding zodat elke gebruiker hem eerst kan doorlezen.
- Apparaat binnenshuis en niet in vochtige ruimtes gebruiken.
- Verwijder of plaats een stekker nooit met natte handen resp. uit en in de wandcontact doos.
- Indien zowel stekker en/of netsnoer als snoeringang-in-het-apparaat beschadigd zijn dient dit door een vakman hersteld te worden.
- Bij onweer altijd de stekker uit het stopcontact halen, zo ook wanneer het apparaat een poos niet gebruikt wordt.
- Bij het verwijderen van een stekker uit het stopcontact nooit aan het netsnoer trekken.
- Apparaat zodanig installeren dat er voldoende koeling mogelijk is.
- Toestel niet in de buurt van warmtebronnen en/of in direct zonlicht gebruiken.
- Zorg ervoor dat er geen kleine objecten of vloeistoffen in het toestel kunnen binnendringen.
- Toestel alleen reinigen met een licht vochtige stofvrije doek, geen reinigingsmiddelen of oplosmiddelen gebruiken!
- Het toestel bevat buiten de in de gebruiksaanwijzing genoemde onderdelen geen onderdelen die door de gebruiker vervangen of gerepareerd kunnen worden.
- Indien het toestel defect is, moet dit hersteld worden door een door US Blaster voorgeschreven reparatiebedrijf.
- Het apparaat buiten bereik van kinderen houden.

*Voer zelf geen reparaties uit aan het apparaat; in élk geval vervalt de totale garantie. Ook mag het apparaat niet eigenmachtig worden gemodificeerd, ook in dit geval vervalt de totale garantie. Tevens vervalt de garantie bij ongevallen en beschadigingen in élke vorm t.g.v. onoordeelkundig gebruik en/of het niet in acht nemen van de waarschuwingen in het algemeen en gestelde in deze gebruiksaanwijzing. US Blaster Europe aanvaardt geen enkele aansprakelijkheid in geval van persoonlijke ongelukken als gevolg van het niet naleven van veiligheidsinstructies en waarschuwingen. Dit geldt ook voor gevolgschade in wélke vorm dan ook.*

**Bewaar de verpakking zodat, indien het apparaat defect is, u dit in de originele verpakking kunt opsturen om beschadigingen te voorkomen.**



## Waarschuwing

Plaats de rookmachine op minimaal 100 cm van brandbaar materiaal zoals gordijnen, boe

## Veiligheid

Sluit de rookmachine ALTIJD aan op een wandkontaktdoos of verlengkabel voorzien van randaarde!

## Installatie en gebruik

Haal de rookmachine uit de verpakking. Sluit de netaansluiting van de afstandsbediening nog niet aan,

## Opstelling

Plaats de rookmachine op een gemakkelijk bereikbare plaats in verband met het bijvullen. Het is ook

## Uitschakelen

Schakel de rookmachine altijd uit door de stekker uit de wandkontaktdoos te halen. Het 700 Watt verwarmingselement blijft anders onnodig stroom verbruiken.

## Technische gegevens

Aansluitspanning:	230V/50 Hz
Verwarmingselement:	700 Watt
Opwarmtijd:	± 10 minuten
Aaneengesloten gebruik:	3 minuten (max.)
Rookopbrengst:	80 m <sup>3</sup> / minuut
Tankinhoud:	0,8 liter
Afmetingen:	14 x 16 x 36 cm (HxBxD)
Gewicht:	5 Kg